


Your 2Pot system set-up guidelines

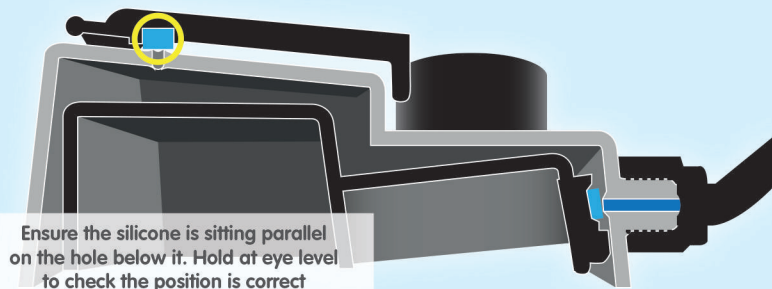

Ensure the silicone is sitting parallel on the hole below it. Hold at eye level to check the position is correct

Ensuring that the AQUAvalve5 floods and drains correctly

- 1** Making sure your AQUAvalve5 floods and drains correctly is simply achieved and only takes a few seconds.
- 2** Hold the AQUAvalve5 at eye level so that you can see the silicone fitted to the top float resting on the hole below it.
- 3** The silicone must create a tight seal when touching the hole.
- 4** If it looks like it is not sitting parallel on the hole below, simply lift the top float and apply pressure to one side of the silicone, drop the float and hold at eye level again. Repeat the procedure if necessary.

Care and maintenance

- 1** At the end of your growing season, clean the AQUAvalve5 using warm soapy water. Using an old tooth brush will help.

The AQUAvalve5 is easily disassembled. The top float will slide all the way across and the bottom float is unclipped from its pivoting position. The circular discs fitted to the top float can also be removed by using pliers to grip the raised point.
- 2** It is also handy to have a paper clip or pipe cleaner to hand so that you can push it through the AQUAvalve5 nozzle, this will remove any lime scale build up that may have occurred during the growing season.

At this point is it advisable to remove the silicones to avoid them being lost.

Blowing through the AQUAvalve5 nozzle will also help to remove any build up. Do not under any circumstances use a drill & drill bit to clear the AQUAvalve5 nozzle.

This will potentially damage the AQUAvalve5 beyond repair.

Allow your plants to establish before turning your system on.




2Pot system contents

- 1x 12.4 gallon reservoir & lid
- 3x 3/8" top hat grommet
- 1x 3/8" golf filter
- 2x 3/8" in-line tap
- 1x 3/8" cross connector
- 2x 1Pot trays & lids
- 2x 3.9 gallon pot
- 2x AQUAvalve5
- 6.6ft of 3/8" pipe
- 2x Root Control Square
- 2x AirBase Square

Plan views and options

Suggested layout

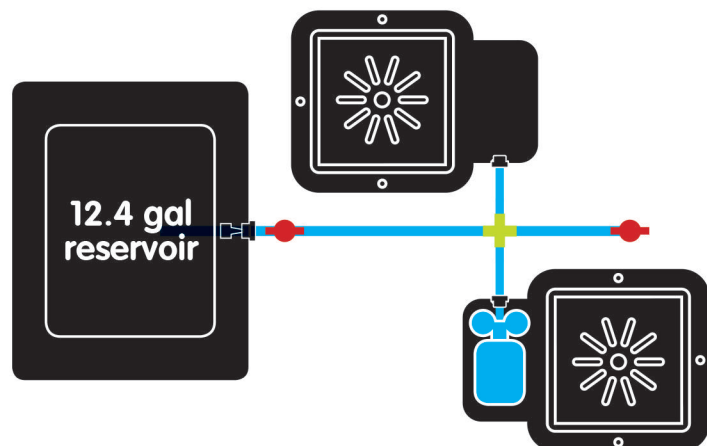

- AQUAvalve5
- 3/8" golf filter
- 3/8" top hat grommet
- 3/8" cross connector
- 3/8" inline tap
- 3/8" pipe

Advice

- Pot up your plants, water through, then allow your plants to establish in the pots for a period of 7 to 10 days before turning your system on. This will encourage a stronger and healthier root system.
- Always raise your reservoir/FlexiTank to a minimum of 6" above the highest AQUAvalve5 and re-fill the reservoir FlexiTank when there is approx. 1/3 of the solution left – NEVER ALLOW THE RESERVOIR/FLEXITANK TO RUN EMPTY.
- With AQUAvalve5 systems mineral or organic fertilizers may be fed via the reservoir and pipework. Organic fertilizers will require a water pump in the reservoir running for 15 mins every 2 hrs and cleaning of the reservoir, pump, and filter each time the reservoir empties. Flush pipework with plain water every time the reservoir empties.
- Clean all substrate from the bottom and sides of the pots before placing in each tray. This will ensure your system is clean from the start.
- Always use free draining substrates, for example: soil/perlite, coco/perlite, soil/clay pebbles, coco/clay pebbles, rockwool/clay pebbles.

1Pot dimensions



1Pot setup instructions

- Put root control square in pot gold face up.
Place AirBase Square in bottom of pot with flat side facing up.
- Pour a small amount of medium in the pot.
Push the medium down through holes in the AirBase to create wicks.
Fill pot with blended substrate about 1-2" below the rim..
- From outside of tray, push 3/8" top hat grommet into the hole in the tray wall.
Thread approx 12" of 3/8" pipe into the tray through the grommet.
- Remove AQUAvalve collar.
Push 3/8" pipe through collar and attach to AQUAvalve nozzle.
Rescrew collar - DON'T overturn!
When you feel it grip STOP.
- Remove any slack in the 3/8" pipe by drawing excess out of the tray.
- Align the 'half moon' section on the rear of the AQUAvalve with the 'T' section in the tray.
Firmly push the AQUAvalve onto the 'T' to seat it so it doesn't rise/fall with water level.
- Position your tray so it is level and not at an angle.
- Cut 3/8" pipe to the appropriate length to set up your system.
Try to keep spacing even between pots.
- Push 3/8" top hat grommet into tank, then push 3/8" pipe through grommet.
- Inside the tank, push 3/8" Golf Filter into the 3/8" pipe.
- Place pot in the tray. Make sure it is CLEAN! Avoid debris in the tray that could inhibit the floats of the AQUAvalve.
Place tray lid over the AQUAvalve onto the tray.

Using your front instruction sheet, repeat the module set up instructions for the number of trays.

Allow your plants to establish for 7-10 days before turning system on

Advice

If you require any guidance email - info@autopot-usa.com